 


# Lenco

## STEREO FM RADIO WITH CD PLAYER SCD-24

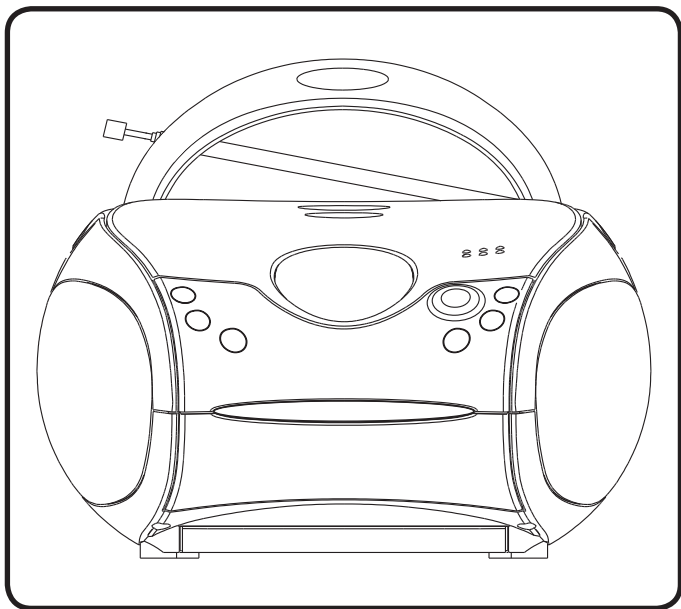

### INSTRUCTION MANUAL

For information and support, [www.lenco.eu](http://www.lenco.eu)





## WARNING

### CLASS 1 LASER PRODUCT

CLASS 1 LASER PRODUCT  
APPAREIL À LASER DE CLASSE 1  
PRODUCTO LASER DE CLASE 1

CAUTION  
INVISIBLE LASER RADIATION  
WHEN OPEN AND INTERLOCKS  
DEFEATED.  
AVOID EXPOSURE TO BEAM



This product contains a low power laser device.

**Warning: Do not touch the lens.**

DO NOT THROW BATTERIES IN FIRE !

## PRECAUTIONS

Follow the advice below for safe and appropriate operations.

### ON PLACEMENT

- Do not use the unit in places which are extremely hot, cold, dusty, or humid.
- Place the unit on a flat and even surface.
- Do not restrict the air flow of the unit by placing it in a place with poor air flow, by covering it with a cloth, or by placing it on a carpet.

### ON SAFETY

- When connecting and disconnecting the AC cord, grip the plug and not the cord itself. Pulling the cord may damage it and create hazard.
- When you are not going to use the unit for a long period of time, disconnect the AC power cord.

### ON AC VOLTAGE

- Before use, check that the rated voltage of your unit matches your local voltage.

### ON CONDENSATION

- When left in a heated room where it is warm and damp, water droplets or condensation may form inside the CD player.
- When there is condensation inside the unit, the unit may not function normally.
- Let it stand for 1 to 2 hours before turning the power on, or gradually heat the room up and dry the unit before use.
- Ensure a minimum distance of 5 cm around the apparatus for sufficient ventilation.
- Ensure that the ventilation is not impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
- Do not place naked flame sources, such as lighted candles on the apparatus.
- Take attention to the environmental aspects of battery disposal.
- Use the apparatus only in moderate climates (not in tropical climates).
- Do not expose the apparatus to dripping or splashing.
- Do not place objects filled with liquids, such as vases, on the apparatus.

Should any trouble occur, disconnect the AC power cord and refer servicing to qualified personnel.



The lightning flash with arrowhead symbol within the triangle is a warning sign alerting the user of "dangerous voltage" inside the unit.

### CAUTION

RISK OF ELECTRIC SHOCK  
DO NOT OPEN

**ATTENTION :** To reduce the risk of electric shock, do not remove the cover. There are no user serviceable parts inside the unit. Refer all servicing to qualified personnel.

 


The exclamation point within the triangle is a warning sign alerting the user of important instructions accompanying the product.





In case of malfunction due to electrostatic discharge, the apparatus has to be reset by disconnecting it from mains supply.

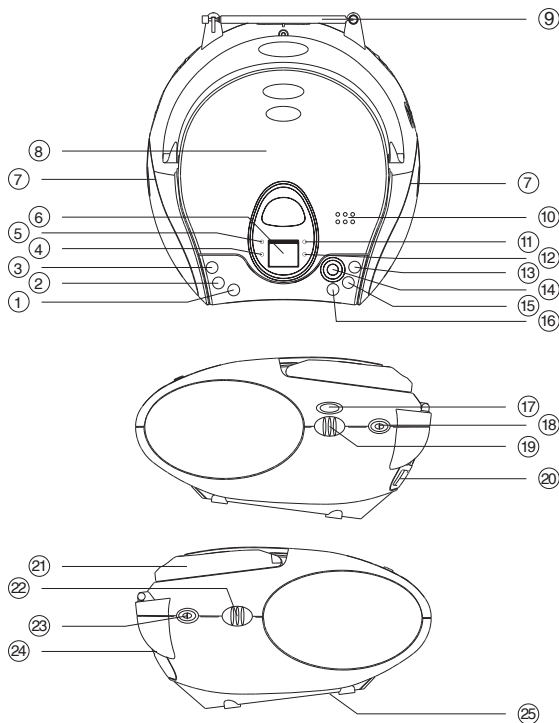

## LOCATION OF CONTROLS



1. CD PROGRAM BUTTON
2. CD REPEAT BUTTON
3. BBS BUTTON
4. REPEAT INDICATOR
5. POWER INDICATOR
6. CD DISPLAY
7. SPEAKER
8. CD DOOR
9. TELESCOPIC ANTENNA
10. OPEN / CLOSE CD BUTTON
11. FM STEREO INDICATOR
12. PROGRAM INDICATOR

13. CD NEXT BUTTON 
14. CD PLAY / PAUSE BUTTON 
15. CD BACK BUTTON 
16. CD STOP BUTTON 
17. DIAL SCALE
18. MODE SWITCH
19. TUNING CONTROL
20. AC SOCKET
21. CARRYING HANDLE
22. VOLUME CONTROL
23. FUNCTION SWITCH
24. PHONES JACK
25. BATTERY COMPARTMENT

GB 1

 
## POWER SUPPLY

### USING HOUSE CURRENT


Before use, check that the rated voltage of your unit matches your local voltage.

### USING BATTERIES


Disconnect the AC power cord from the AC inlet of the unit. Battery power is cut automatically by the cord while it is connected.

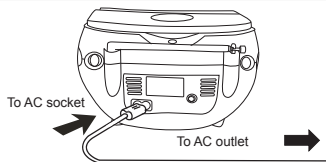

 When the volume decrease, or the sound distorts, replace all of the batteries with new ones.

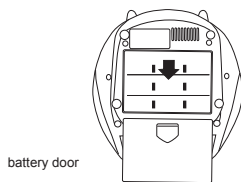


Insert 6 UM-2  
( size C ) batteries.

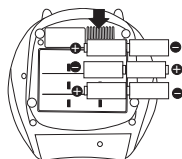 

## ADJUSTING THE SOUND
 
### TO ADJUST THE VOLUME

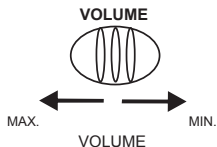

### FOR PRIVATE LISTENING

Plug in headphones (ø3.5 mm stereo mini-plug) to the PHONES jack.

 
When headphones are plugged in, the speakers are automatically disconnected.

## LISTENING TO THE RADIO


1. Set to RADIO




3. Tune in to a station.

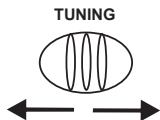

 2. Select a MODE.

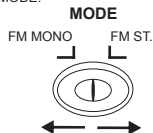

 
4. Adjust the sound.

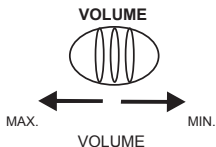

GB 2

## FOR BETTER RECEPTION

 FM

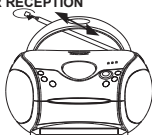

- NOTE :**
1. FM stereo LED indicator lights if receive FM stereo broadcast and the MODE switch set on "FM STEREO".
  2. When too much noise is heard during FM STEREO reception, set MODE switch to FM mono.

## AFTER LISTENING

 
Set the FUNCTION selector to OFF.

## COMPACT DISC PLAYBACK

1. Set to CD




2. Open the CD door by pushing  
CD Door Open / Close button.

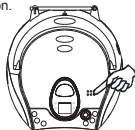

3. Insert a disc with the label side facing up.


4. Close the CD door.  
The disc will rotate and the total  
tracks of the disc will show on  
the display.




5. Press the Play / Pause  button.  
Track number " 1 " will be shown.




## TO INTERRUPT PLAYBACK

  Press the Play/Pause  button.  
Press the button again to resume playback.


 

 


## TO STOP PLAYBACK

Press the STOP button and the display shows the total  
tracks of the disc.





## TO SKIP TO THE BEGINNING OF A TRACK

- Press either one of the   skip buttons according to the desired skip direction.
- Play/back resumes from the selected track.
- When the  button is pressed once during play, the previous track starts again.
- When the  button is pressed once during play, the next track plays.

 


## SEARCHING FOR A PASSAGE WITHIN A TRACK

- Keep the  or  button pressed during playback,  
and release the button as soon as you recognise the desired  
passage. Then normal CD playback will resume from this point.


## REPEAT PLAYBACK

This function allows a single track or all tracks on a disc to be played repeatedly.




### TO REPEAT THE SAME TRACK

 Press the REPEAT button once during playback, Repeat indicator will illuminate and keep flashing.

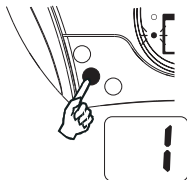


### TO REPEAT THE WHOLE DISC

 Press the REPEAT button twice until repeat indicator will lighten.

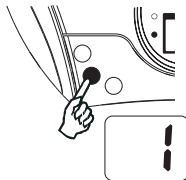

### TO CANCEL REPEAT PLAYBACK FUNCTION

 Press the REPEAT button again until repeat indicator off.

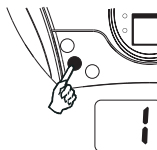


#### Note on CD-R/RW discs

- Because of non-standardized format definition/ production of CD-R/RW, playback quality and performance are not guaranteed.
- Manufacturer is not responsible for the playability of CD-R/RW due to recording conditions, such as PC performance, writing software, media ability, etc.
- Do not attach a seal or label to either side of the CD-R/RW disc. It may cause a malfunction.
- It is recommended to record only audio files on CD-R/RW discs for easy reading.

## BASS BOOST

 To enjoy a BASS BOOST sound effect, press BBS button.

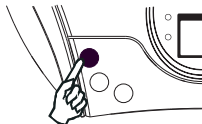

## PROGRAM PLAYBACK

### PROGRAM TRACKS

Programming tracks of disc are possible when playback is stopped. Up to 20 tracks can be stored in the memory in any order.

 
1. In stop mode, press PROG button, the 0 and the PROGRAM indicator will be flashing on and off on the display.
2. Press CD SKIP/SEARCH FORWARD button to select the first desired track to be programmed.
3. Press PROG button to enter. The display changes to show 0 and it will be flashing.
4. Repeat steps 2 & 3 to store other desired tracks until all tracks are programmed.
5. Press PLAY/PAUSE button to start playback from the first programmed track.
6. Press STOP button to stop program playback.

Note: Program function can only be done in stop mode.

### To Erase the Memory(Program)

To clear the program, you may have two ways:

1. Press STOP button when the disc is stopped, or
2. Open the CD compartment lid, program will be erased.

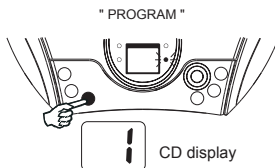

## MAINTENANCE

 
### CLEANING A CD

If the CD skips or will not play, the disc may need cleaning. Before playing, wipe the disc from the centre out with a cleaning cloth. After playing, store the disc in its case.



### CLEANING THE CD LENS

If the CD lens is dusty, clean it with a brush-blower. Blow several times on the lens and remove the dust with the brush. Finger prints may be removed with a cotton swab moistened with alcohol.

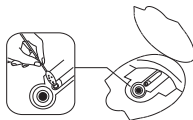

### CLEANING THE UNIT

Do not use volatile chemicals on this unit. Clean by lightly wiping with a soft cloth.

### IMPORTANT NOTE

If an abnormal display indication or an operating problem occurs, disconnect the AC power cord and remove the batteries. Wait at least 5 seconds, then reconnect the AC power cord or reinstall the batteries.

### WARNING

Should the CD door be opened before the reading of the CD is completed, a jamming noise may occur. This is resolved by closing the CD door.



## SPECIFICATIONS

### CD SECTION

Channels:	2 channels
S / N ratio:	60 dB
Wow & Flutter:	undetectable
Sampling frequency:	44.1 kHz 8 x over sampling
Quantization:	1 bit DA converter
Pick up light source:	Semi - conductor laser
Pick up wave length	790 nm

### RADIO SECTION

Tuning ranges:	FM 87.5 - 108 MHz
Antennas:	FM Rod antenna

### GENERAL

Output power:	1 W + 1 W (RMS)
Power consumption:	13.5 W
Speaker:	3 " 8 OHM
Phones jack:	3.5MM
Power source:	AC : 230V ~ 50Hz DC : 9V ( 6 x 1.5V LR14/ "C"/UM2 )

Dimensions:	224(L) x 234(D) x 126(H)mm
Weight	2.4 KGS

Due to continuing improvement, the features and the design are subject to change without notice.

Where to place the item :

Today's furniture is coated with a wide variety of lacquers and synthetic-coatings that are treated with an extensive range of cleaning products. Therefore, the possibility that some of these substances contain components that react adversely to the rubber feet of the item and soften them, cannot be completely excluded. The rubber feet of the appliance can cause discoloring to furniture surfaces. If necessary, place the appliance on a non-slide surface.



If at any time in the future you should need to dispose of this product please note that: Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice. (Waste Electrical and Electronic Equipment Directive)

For information and support, [www.lenco.eu](http://www.lenco.eu)

